

GCC USER MANUAL




CONTENTS

GENERAL FEATURES	2
SETUP	3
SETTINGS	5
TROUBLESHOOTING	8
DIMENSIONS.....	9

GENERAL FEATURES

- Ability to operate in the range of 9-32 V DC.
- Feet or metric display option.
- Wired connection.
- Adjusting screen brightness.
- Turkish and English language option.
- Communication with RS485 Modbus RTU protocol.
- Working with magnetic sensor.
- The windlass shows the speed of movement.

SETUP

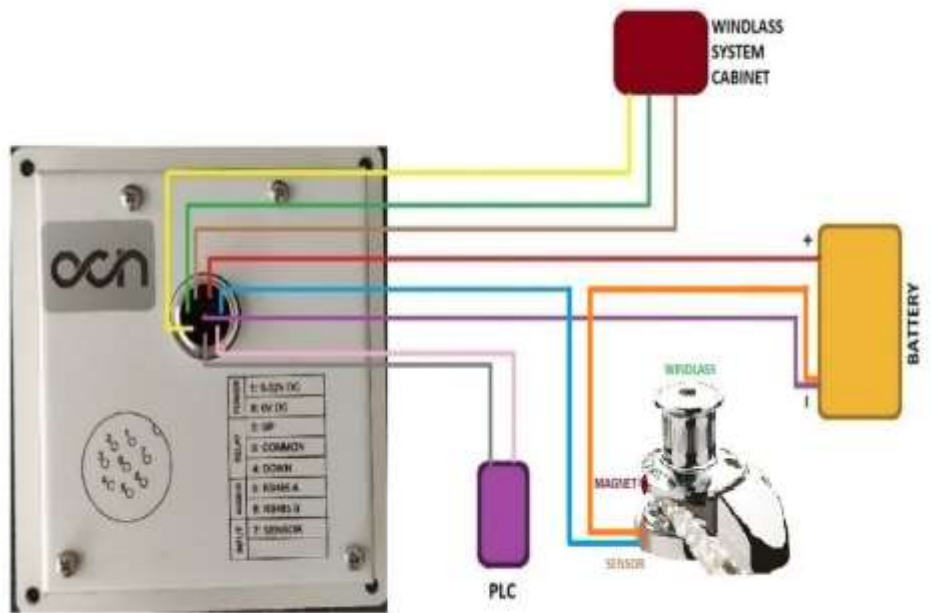

Picture 1.0 Installation Diagram

➤ ***Connecting the power connector:***

Power; connect to pin 1 (+) , pin number 8 (-).

Relay; pin 2 is UP, pin 3 is COMMON, pin 4 is DOWN.

Modbus; RS485 A to pin 5, RS485 B to pin 6.

Input;Sensör to pin 7.(It should be connected to the other end (-) of the sensor.)

- ***Modbus RTU connection:*** Connect between **RS485 A** terminal of PLC and **RS485 A** terminal of **GCC**, and between **RS485 B** terminal of PLC and **RS485 B** terminal of **GCC**.

Note: When making device connections, make sure that all power is disconnected.

SETTINGS

Settings Menu:




Long press the **MENU** button to open the settings menu and move the **UP** and **DOWN** buttons to the relevant section and briefly press the **MENU** button..

Counter Settings:



After entering the Settings menu, move to the **Counter Settings** with the **UP** and **DOWN** keys and press the **MENU** key for a short while..

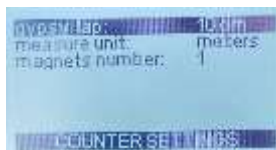

After entering the **Counter Settings** menu, short press the **MENU** button to switch between the settings, with the **UP** and **DOWN** buttons.;


- The distance adjustment is determined by hovering over the windlass lap.
- Measurement unit, measurement type is selected.
- Magnetic number is selected.

By pressing the **SILENCE** button briefly, the tank shape is saved in the memory and the upper menu is returned.

Modbus Communication Settings:



After entering the Settings menu, move to **Modbus Settings** with the **UP** and **DOWN** keys and press the **MENU** key for a short time.

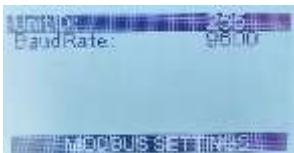

Setting the Unit ID value; With the **UP** and **DOWN** keys, the desired value is reached and by short pressing the **MENU** key, **Baud Rate** is set.

Setting the Baud Rate; With the **UP** and **DOWN** keys, the desired value is reached and by pressing the **SILENCE** key, the settings are saved in the memory and the upper menu is returned.

Device Settings:



After entering the Settings menu, go to **Device Settings**. Short press the **MENU** button.



To mute the buzzer; With the **UP** and **DOWN** keys, the **OFF** position is reached and by short pressing the **MENU** key, the **Screen Brightness** is adjusted.

To change the screen brightness; With the **UP** and **DOWN** keys, the screen brightness is adjusted to the desired state and by short pressing the **MENU** key, Screen Time is set.

To change the screen backlight off time; The desired position is reached with the **UP** and **DOWN** keys and the language setting is reached by pressing the **MENU** key briefly.

To change the language setting: Use the **UP** and **DOWN** keys to reach the desired language and press the **SILENCE** key to save the settings and return to the upper menu.

TROUBLESHOOTING

When the device is not running:

Check the power cable entries.

Windlass Distance does not give information:

Check sensor connections and magnetic.

When Buzzer Doesn't Work:


Make sure the buzzer is on by checking the settings.

DIMENSIONS

Top View:



Back view:

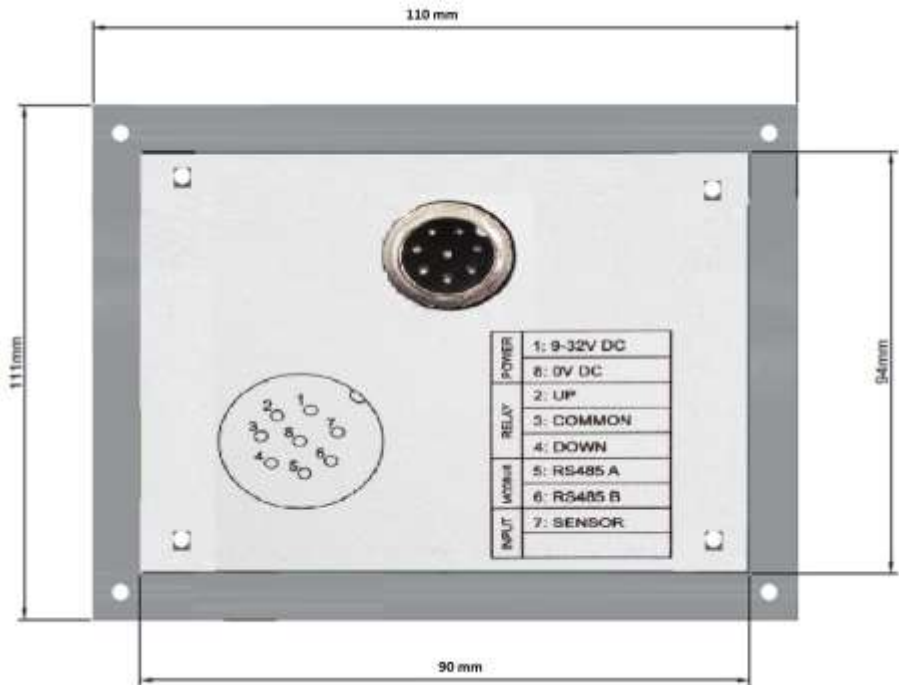

Notes;

OCN ELEKTRONİK VE TİCARET A.Ş.

İçmeler Mahallesi Altunay Sokak

No:33 Kat:3 İ Kapı No:11

Tuzla/İSTANBUL

Telefon : +90 (216) 629 29 19

E-Posta : info@ocnelectronic.com

<http://ocnelectronic.com>